

## Special Reminder

- 1、 Do not modify, disassemble or repair the machine without permission.
- 2、 Please do not use it in the environment of flammable, explosive, corrosive gas and metal dust.
- 3、 Please use DCSV adapter to charge this product.
- 4、 Do not use this product outdoors or in an environment where the temperature is too high.
- 5、 Do not put this product into the fire to avoid danger.
- 6、 Do not put anything on the top of the product to avoid blocking the air outlet.

## Warranty Service

- 1、 We promise one year free warranty service. Within one year from the date of purchase, the company provides free repair service if the product has problems caused by the quality of the product itself.
- 2、 The company provides paid warranty service for products more than one year from the date of purchase.
- 3、 In the free warranty period of the product, such as the damage procedure is so serious that it can not be repaired or parts have stopped supplying. The company provides no less than the original product specifications to replace the product. If not the same grade, then provide a more advanced product replacement, but need to make up the difference.
- 4、 If there is any of the following cases during the warranty period, the company will charge the appropriate fee according to the damage situation.
  - a. Damage caused by man-made products, etc.
  - b. Unauthorized repair or modification of the product.
  - c. Not in accordance with the instructions for use, etc.

## Product application range

Suitable for car, office desktop, wardrobe, shoe cabinet, refrigerator, bedroom, hotel room, etc The air of the premises shall be disinfected and sterilized.

Warm tip: low grade is suitable for use in the car.



## USER MANUAL

# Plasma Air Disinfection Purifier




Please Read The Manual Carefully Before Use



## Specification

Power : 2.0W/0.4A	Battery : 6800mAh/3.7V	Voltage:DC 4V
Air volume : 5m <sup>3</sup> /h	Wind speed :2 peeds	Noise: ≤ 30dB
Product material :PC	Application area : ≤60m <sup>3</sup>	Number of ion tube :1
Battery lifetime : ≤12Hours	Product Size : 66*66*180mm	Ion tube size :30mm
Colors :Black/White/Blue /Green/Silver	Box Size : 80*80*230mm	Ion tube life :17000 Hours

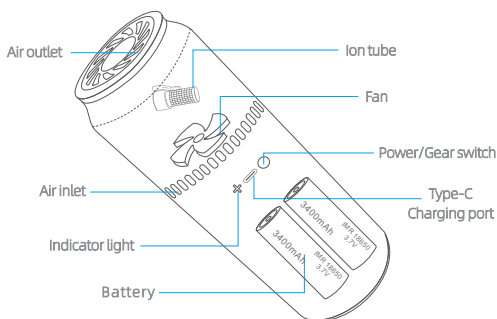


### Packing list:

plasma air disinfectant \*1、 Type-C charging cable \*1、 manual \*1、 USB Car Charger

## Disinfection principle

When the air passes through the ion tube, it will produce ion clusters similar to those in nature. These millions of positive and negative ions will actively send collisions with harmful substances in the air, such as bacteria and viruses, penetrating cell membranes, DNA and proteins, causing them to lose their activity rapidly until they are killed and decomposed. The ions can be used to kill and decompose. Thus effectively solving the various pollution problems of indoor air.

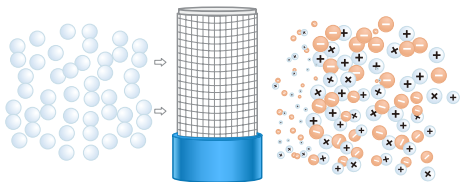

## Instructions for use

Power on operation



Shift and shutdown operations



Tap

① Long press the power switch, the indicator light is slightly bright (green), The equipment is turned on to work, at this time for 1 gear air volume.

② Lightly press the power switch, the indicator light is high (green) At this time for 2-speed large air volume. Press and hold the switch again to turn off the power.

Charging instructions



Low Battery Alert



③ A full charge takes about 10 hours and can last for about 12 hours. If it is not used for a long time, it is necessary to fully charge the product regularly.

④ If the battery voltage is detected to be too low, the green light goes off and the red light flashes once and then stops for 2 seconds to cycle through the display

Troubleshooting



(Approx. 17,000 hours of cumulative use)



Ion tube life



⑤ If a short circuit anomaly is detected and the green light goes off, The red light flashes 4 times and then stops for 2 seconds.

⑥ It is recommended to replace the ion tube once in about 2 years, depending on the cumulative length of use.

## Common Troubles

Failure phenomenon

Troubleshooting

Can't boot normally

Please recharge the battery when it runs out of power.

The product makes a "squeak" sound

This is the sound of the release of plasma, depending on the use of environmental humidity, the sound will be louder and smaller.

Ion generator does not work

Under normal circumstances, there is a slight current and dark faint blue light. If the ion tube bursts, the ion tube needs to be replaced.

In the following cases, please send it to the maintenance department designated by our company for maintenance

1. If the above method cannot solve the problem
2. Abnormal situation caused by foreign matter or moisture entering the internal space.