

User Manual

tSENSE (Disp)

CO₂, temperature and
relative humidity transmitter



General

tSENSE (Disp) for wall mounting measures indoor air carbon dioxide concentration, temperature and relative humidity in rooms. tSENSE (Disp) is available with or without colour touch display (LCD).

The unit connects to Direct Digital Control (DDC).

Linear outputs are pre-programmed as CO₂, temperature and relative humidity transmitter. Measuring ranges can be modified from PC (Windows) software UIP (version 5 or higher) and USB communication cable, alternative via Modbus or BACnet.

Table of contents

General.....	1
Table of contents.....	2
Opening of housing	3
Download of software UIP.....	3
Enter PIN code	4
Output Configurations	4
Outputs	5
Out1/Out2/Out3	5
Voltage range.....	5
Select source	6
Types.....	7
Measure range settings	7
Relay.....	8
Communication settings	9
Protocol.....	9
Address/Baud rate	9
Connection configurations.....	10
Measured values	10
CO ₂ /Temperature/Humidity	10
Display settings	11
Limits.....	11
Chart 24h/Week.....	11
Screen settings.....	12
Brightness	12
Background.....	12
Screensaver, Time setting	12
Toggle (Time and CO ₂ and/or Temperature and/or Humidity).....	13
Meter settings	14
Meter information.....	14
Temperature unit (°C/°F).....	15
Calibration options CO ₂	15
Zero cal/Background/Target cal	16
ABC.....	17
Temperature/Humidity Offset.....	18
Automatic system test	19
Error codes and action plans.....	20
UIP Logger	21
Export Logger Data.....	21
Log to file	21
PIN codes	22
Change PIN code for access to display settings (PIN1).....	22
Toggle PIN1 On/Off	22
Change PIN code for access to meter settings (PIN2).....	22
Maintenance	23

Opening of housing

See Installation Manual

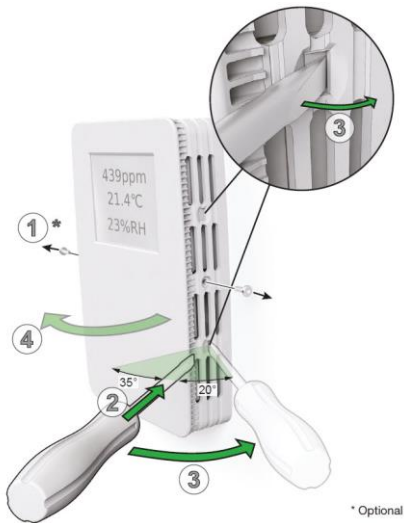


Figure 1

Download of software UIP

senseair.com

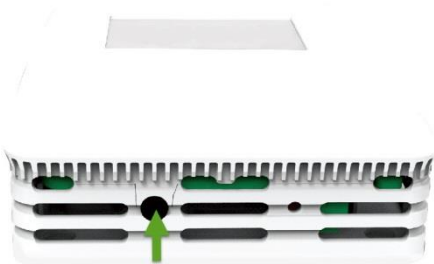













Figure 2: Connection to PC via phone jack
Connect Interface cable USB – 3.5mm Art.No.:00-0-0070

Check for updates

<p>1</p>	<p>2 New version available</p>	<p>2</p>
<p>3</p>	<p>4</p>	

Enter PIN code

<p>0 Power ON</p> 	<p>1</p> <table border="1"> <tr><td>CO₂</td><td>429ppm</td></tr> <tr><td>Temperature</td><td>23.1°C</td></tr> <tr><td>Humidity</td><td>21%RH</td></tr> <tr><td></td><td></td></tr> </table> 	CO ₂	429ppm	Temperature	23.1°C	Humidity	21%RH			<p>2 PIN1: 1111</p> <table border="1"> <tr><td>Enter PIN</td><td colspan="2">1111</td></tr> <tr><td></td><td>2</td><td>3</td></tr> <tr><td></td><td>5</td><td>6</td></tr> <tr><td></td><td>8</td><td>9</td></tr> <tr><td>Del</td><td>0</td><td>«</td></tr> </table>	Enter PIN	1111			2	3		5	6		8	9	Del	0	«	<p>3</p> <table border="1"> <tr><td>CO₂</td><td>Screen</td></tr> <tr><td>Temperature</td><td>Settings</td></tr> <tr><td>Humidity</td><td></td></tr> <tr><td></td><td></td></tr> <tr><td></td><td>«</td></tr> </table>	CO ₂	Screen	Temperature	Settings	Humidity					«
CO ₂	429ppm																																			
Temperature	23.1°C																																			
Humidity	21%RH																																			
Enter PIN	1111																																			
	2	3																																		
	5	6																																		
	8	9																																		
Del	0	«																																		
CO ₂	Screen																																			
Temperature	Settings																																			
Humidity																																				
																																				
	«																																			
<p>4 PIN2: 2001</p> <table border="1"> <tr><td>Enter PIN</td><td colspan="2">2001</td></tr> <tr><td></td><td>2</td><td>3</td></tr> <tr><td></td><td>5</td><td>6</td></tr> <tr><td></td><td>8</td><td>9</td></tr> <tr><td>Del</td><td>0</td><td>«</td></tr> </table>	Enter PIN	2001			2	3		5	6		8	9	Del	0	«	<p>5</p> <table border="1"> <tr><td>Meter</td><td></td></tr> <tr><td>Measurements</td><td></td></tr> <tr><td>Outputs</td><td></td></tr> <tr><td>Misc</td><td>«</td></tr> </table>	Meter		Measurements		Outputs		Misc	«												
Enter PIN	2001																																			
	2	3																																		
	5	6																																		
	8	9																																		
Del	0	«																																		
Meter																																				
Measurements																																				
Outputs																																				
Misc	«																																			

Output Configurations

Terminal	Default Output	Default Output Range	Outputs of this sensor	Output Ranges of this sensor
OUT(1)	0 – 10VDC	0 – 2000ppm CO ₂	See label	See label
OUT(2)	0 – 10VDC	0 – 50°C	See label	See label
OUT(3)	0 – 10VDC	0 – 100%RH	See label	See label

Table 1. Default output configurations of tSENSE (Disp)

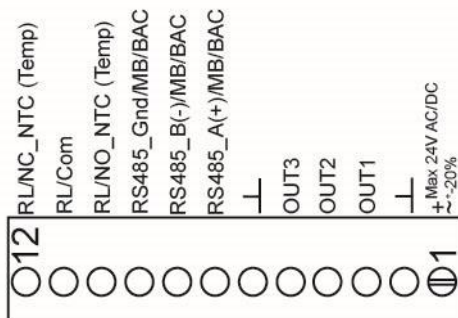






Figure3: Screw Terminal

Connect the sensor to PC with the connect interface cable USB – 3.5mm Art.No.: 00-0-0070

The sensor is supplied with 0 - 10VDC linear outputs for Out(1), Out(2) and Out(3) (see Table 1). Alternative output ranges can be configured with PC software UIP (version 5 or higher). See information at senseair.com.



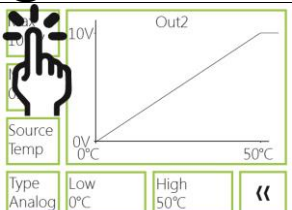


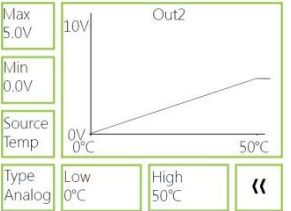
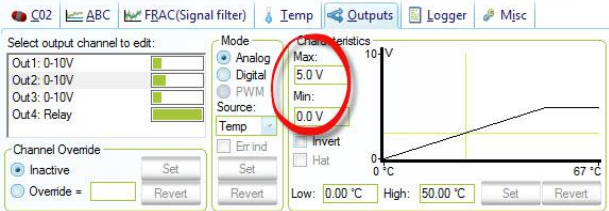
Outputs

Out1/Out2/Out3

<p>1</p> <table border="1"> <tr><td>CO₂</td><td>429ppm</td></tr> <tr><td>Temperature</td><td>23.1°C</td></tr> <tr><td>Humidity</td><td>21%RH</td></tr> <tr><td></td><td></td></tr> </table> 	CO ₂	429ppm	Temperature	23.1°C	Humidity	21%RH			<p>2</p> <table border="1"> <tr><td>CO₂</td><td>Screen</td></tr> <tr><td>Temperature</td><td>Set</td></tr> <tr><td>Humidity</td><td></td></tr> <tr><td></td><td>«</td></tr> </table> 	CO ₂	Screen	Temperature	Set	Humidity			«	<p>3</p> <p>Enter PIN 2001</p> <table border="1"> <tr><td></td><td>2</td><td>3</td></tr> <tr><td></td><td>5</td><td>6</td></tr> <tr><td></td><td>8</td><td>9</td></tr> <tr><td>Del</td><td>0</td><td>«</td></tr> </table> 		2	3		5	6		8	9	Del	0	«	<p>4 Outputs</p> <table border="1"> <tr><td>Meter</td></tr> <tr><td>Measurements</td></tr> <tr><td>Outputs</td></tr> <tr><td>Misc</td></tr> </table> 	Meter	Measurements	Outputs	Misc
CO ₂	429ppm																																		
Temperature	23.1°C																																		
Humidity	21%RH																																		
CO ₂	Screen																																		
Temperature	Set																																		
Humidity																																			
	«																																		
	2	3																																	
	5	6																																	
	8	9																																	
Del	0	«																																	
Meter																																			
Measurements																																			
Outputs																																			
Misc																																			

Voltage range

Max (the same approach with "Min")

<p>5 Out2</p> <table border="1"> <tr><td>Out1</td><td>10.0V</td></tr> <tr><td>Out2</td><td>4.8V</td></tr> <tr><td>Out3</td><td>4.8V</td></tr> <tr><td>Relay</td><td>1(active)</td></tr> <tr><td></td><td>«</td></tr> </table> 	Out1	10.0V	Out2	4.8V	Out3	4.8V	Relay	1(active)		«	<p>6</p> <p>Out2 Temp</p>  <p>«</p>	<p>7 Max</p>  <p>Source Temp 0V 0°C 50°C</p> <p>Type Analog Low 0°C High 50°C «</p>	<p>8 10.0V, 9.9V..5.0V..</p> <p>Max limit 5.0V</p>  <p>«</p>
Out1	10.0V												
Out2	4.8V												
Out3	4.8V												
Relay	1(active)												
	«												
<p>9</p> <p>Max limit 5.0V</p> <p>- +</p> 	<p>10</p>  <p>Max 5.0V 10V Out2</p> <p>Min 0.0V</p> <p>Source Temp 0V 0°C 50°C</p> <p>Type Analog Low 0°C High 50°C «</p>	<p>UIP</p>  <p>Mode Analog Digital PWM Source: Temp</p> <p>Channel Override Inactive Set Revert</p> <p>Channel statistics Max: 5.0 V Min: 0.0 V</p> <p>Low: 0.00 °C High: 50.00 °C Set Revert</p>											

Select source

<p>7 Source</p>	<p>8</p>	<p>9</p>	<p>10</p>
<p>UIP 1 Source CO₂ selected</p>		<p>2 Set (Save)</p>	

Types

Analogue/Analogue Invert

<p>7 Analogue</p>	<p>8</p> <p>Type An,Inv</p> <p>Analog Analog Invert</p> <p>Digital Digital Invert</p>	<p>9</p> <p>Type An,Inv</p> <p>Analog Analog invert</p> <p>Digital Digital invert</p>	<p>10 Analogue invert</p>
--------------------------	--	--	----------------------------------

UIP5 **1** Invert **2** Save (Set)

Digital/Digital Invert

<p>10 Digital</p>	<p>10 Digital Invert</p>
--------------------------	---------------------------------

Measure range settings







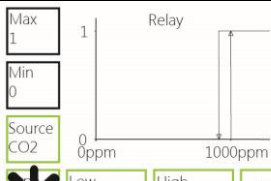



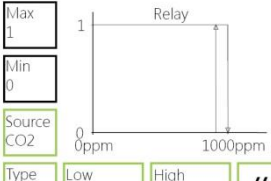
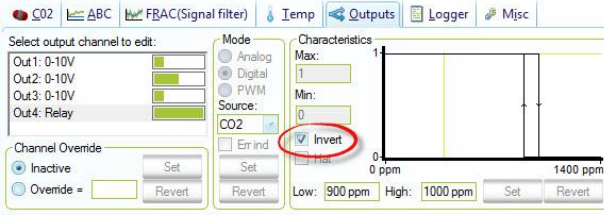
Low (the same approach with "High")

<p>7 Low 600ppm</p>	<p>8 600, 550...400ppm</p> <p>Low 400ppm</p>	<p>9 Low 400ppm</p> <p>Low 400ppm</p>	<p>10</p>
----------------------------	---	--	------------------

UIP

Outputs

Relay

<p>1</p> <p>CO₂ 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21%RH</p> 	<p>2</p> <p>CO₂ Screen</p> <p>Temperature Settings</p> <p>Humidity</p>  <p>«</p>	<p>3</p> <p>Enter PIN 2001</p> <table border="1"> <tr><td>2</td><td>3</td></tr> <tr><td>5</td><td>6</td></tr> <tr><td>8</td><td>9</td></tr> <tr><td>0</td><td>«</td></tr> </table> <p>Del</p> 	2	3	5	6	8	9	0	«	<p>4 Outputs</p> <p>Meter</p> <p>Measurements</p> <p>Outputs </p> <p>Misc «</p>
2	3										
5	6										
8	9										
0	«										
<p>5 Relay</p> <p>Out1 10.0V</p> <p>Out2 4.8V</p> <p>Out3 4.8V</p> <p>Relay 1(active)</p>  <p>«</p>	<p>6</p> <p>Relay  CO2</p> <p>«</p>	<p>7 Type Digital</p> <p>Max 1</p> <p>Min 0</p> <p>Source CO2</p>  <p>Low 900ppm High 1000ppm «</p> 	<p>8</p> <p>Type Dig,Inv</p> <p>Digital </p> <p>Digital invert «</p>								
<p>9</p> <p>Type Dig,Inv</p> <p>Digital Digital invert</p> 	<p>10</p> <p>Max 1</p> <p>Min 0</p> <p>Source CO2</p>  <p>Type Low High</p> <p>Dig,Inv 900ppm 1000ppm «</p>	<p>UIP</p> <p>CO2 ABC FBAC(Signal filter) Temp Outputs Logger Misc</p> <p>Select output channel to edit:</p> <p>Out1: 0-10V</p> <p>Out2: 0-10V</p> <p>Out3: 0-10V</p> <p>Out4: Relay</p> <p>Mode: Analog Digital PWM</p> <p>Source: CO2</p> <p>Channel Override: Inactive Override =</p> <p>Characteristics: Max: 1 Min: 0</p> <p>Low: 900 ppm High: 1000 ppm</p> <p><input checked="" type="checkbox"/> Invert</p> 									

Communication settings

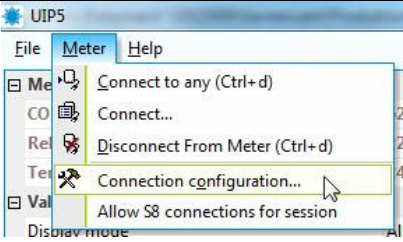
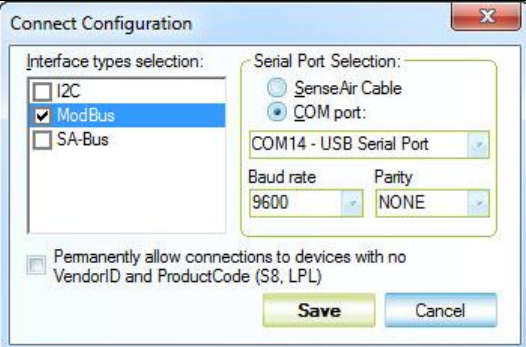


Protocol

<p>5 RS-485</p> <p>Meter info RS-485</p> <p>PIN1 PIN1</p> <p>Reset</p> <p>«</p>	<p>6</p> <p>Protocol Auto</p> <p>Address 10</p> <p>Baudrate 9600</p> <p>Parity, Stop bits None, 1</p> <p>Reset needed to activate new communication settings</p> <p>«</p>	<p>7 NOTE!</p> <p>Protocol Auto</p> <p>Modbus BACnet</p> <p>«</p>	<p>8</p> <p>Protocol Auto</p> <p>Auto Modbus BACnet</p> <p>«</p>
<p>9 NOTE!</p> <p>Meter info RS-485</p> <p>PIN1 PIN2</p> <p>Reset</p> <p>«</p>	<p>UIP 1</p> <p>Select property to edit:</p> <p>Temperature Unit (C/F) Auto</p> <p>Altitude(m) Modbus</p> <p>RS-485 Protocol (reset to activate new communication settings) BACnet</p> <p>RS-485 Baudrate (reset to activate new communication settings)</p> <p>RS-485 Parity (reset to activate new communication settings)</p> <p>RS-485 Stop bits (reset to activate new communication settings)</p> <p>Set Revert</p>		<p>2</p> <p>Property value</p> <p>Auto</p> <p>Modbus</p> <p>BACnet</p> <p>Set Revert</p>

Address/Baud rate

<p>6</p> <p>Protocol Auto</p> <p>Address 10</p> <p>Baudrate 9600</p> <p>Parity, Stop bits None, 1</p> <p>Reset needed to activate new communication settings</p> <p>«</p>	<p>7</p> <p>Address 12</p> <p>-</p> <p>«</p>	<p>8</p> <p>Address 12</p> <p>- +</p> <p>«</p>	<p>9 NOTE!</p> <p>Meter info RS-485</p> <p>PIN1 PIN2</p> <p>Reset</p> <p>«</p>
<p>UIP Address 1</p> <p>Meter information</p> <p>Vendor Name SenseAir AB</p> <p>Product Code tSENSE</p> <p>Serial Number 0x030DA676</p> <p>Firmware 0x66010C</p> <p>Type ID 404</p> <p>Map Version 72</p> <p>Network Address 10</p> <p>Error Flags</p>	<p>2</p> <p>Meter information</p> <p>Vendor Name SenseAir AB</p> <p>Product Code tSENSE</p> <p>Serial Number 0x030DA676</p> <p>Firmware 0x66010C</p> <p>Type ID 404</p> <p>Map Version 72</p> <p>Network Address 12</p> <p>Error Flags</p>	<p>3</p> <p>Change Network Address?</p> <p>Are you sure you want to change meter network id from 10 to 12?</p> <p>Yes No</p>	
<p>UIP Baud rate 1 Misc</p> <p>Select property to edit:</p> <p>Temperature Unit (C/F)</p> <p>Altitude(m)</p> <p>RS-485 Protocol (reset to activate new communication settings)</p> <p>RS-485 Baudrate (reset to activate new communication settings)</p> <p>RS-485 Parity (reset to activate new communication settings)</p> <p>RS-485 Stop bits (reset to activate new communication settings)</p> <p>Select: 19200</p> <p>Set Revert</p>	<p>2</p> <p>Property value</p> <p>Select: 19200</p> <p>9600 19200 38400 57600</p>	<p>3</p> <p>Property value</p> <p>Select: 9600</p> <p>Set Revert</p>	

Connection configurations

<p>1</p>	<p>2 ModBus 3 Choose SenseAir Cable if bought from SenseAir, otherwise choose COM Port 4 Save</p>
	
<p>5 Lower right corner of screen</p> 	<p>6</p> 

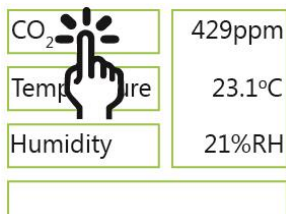
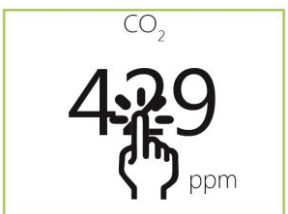
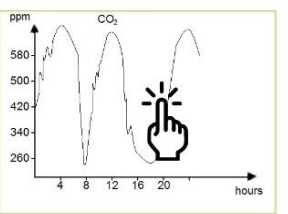
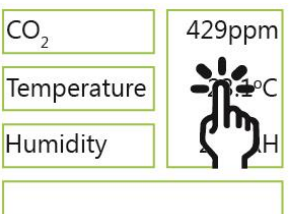
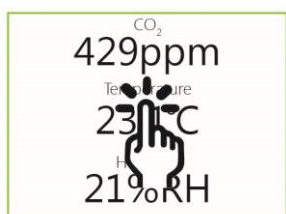



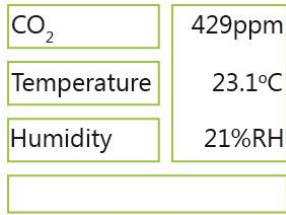
NOTE!

UIP baud rate ≠ RS-485 baud rate if tSENSE (Disp) is connected *via phone jack* (see fig. 2).
 UIP baud rate = RS-485 baud rate if tSENSE (Disp) is connected *via screw terminal* (see fig. 3).

RS-485 Protocol parameter set to “Auto”: the sensor selects protocol depending on the protocol used on the network it is connected to. After power on the sensor then listens to the traffic on the RS-485 network. If the sensor detects valid BACnet or Modbus messages the sensor will start to use the detected protocol. Change communication settings via UIP requires Reset (Power OFF – Power ON) to be executed.

Measured values

CO₂/Temperature/Humidity

<p>1</p> 	<p>2</p> 	<p>3</p> 	<p>4</p> 
<p>5</p> 	<p>6</p> 	<p>7</p> 	<p>8</p> 
<p>9</p> 			

Display settings

Limits

CO₂/(Temperature)/(Humidity)

CO₂ Yellow/Red limit (Temp./Humidity, the same approach as for CO₂ limit settings)



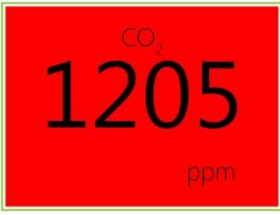






<p>1</p> <p>CO₂ 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21%RH</p> 	<p>2</p> <p>CO₂ Screen</p> <p>Temp Settings</p> <p>Humidity</p> <p>«</p>	<p>3</p> <p>Yellow limit 600ppm</p> <p>Red limit 1000ppm</p> <p>Chart 24h</p> <p>«</p>	<p>4 100,200...700ppm</p> <p>Yellow limit 700ppm</p> <p>-</p> 
<p>CO₂ red limit 1000ppm</p> <p>RH yellow limit 70%RH</p> <p>CO₂ 1205ppm</p> <p>Temperature 73.6°F</p> <p>Humidity 72%RH</p>	<p>CO₂ red limit 1000ppm</p> 	<p>RH yellow limit 70%RH</p> 	



Chart 24h/Week

<p>1</p> <p>CO₂ 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21%RH</p> 	<p>2</p> <p>CO₂ Screen</p> <p>Temp Settings</p> <p>Humidity</p> <p>«</p>	<p>3</p> <p>Yellow limit 600ppm</p> <p>Red limit 1000ppm</p> <p>Chart 24h</p>  <p>«</p>	<p>4</p> <p>CO₂Chart Week</p> <p>24h</p>  <p>«</p>
--	--	---	---





Screen settings

1	2
<div style="display: flex; flex-direction: column; gap: 5px;"> <div style="display: flex; justify-content: space-between;">CO₂429ppm</div> <div style="display: flex; justify-content: space-between;">Temperature23.1°C</div> <div style="display: flex; justify-content: space-between;">Humidity21%RH</div> <div style="border: 1px solid black; height: 20px; width: 100%;"></div> </div> 	<div style="display: flex; flex-direction: column; gap: 5px;"> <div style="display: flex; justify-content: space-between;">CO₂Screen</div> <div style="display: flex; justify-content: space-between;">TemperatureSettings</div> <div style="display: flex; justify-content: space-between;">Humidity</div> <div style="border: 1px solid black; height: 20px; width: 100%;"></div> </div> 

Brightness




3	4 10, 20,...50%
<div style="display: flex; flex-direction: column; gap: 5px;"> <div style="display: flex; justify-content: space-between;">Brightness10%</div> <div style="display: flex; justify-content: space-between;">BackgroundNormal</div> <div style="display: flex; justify-content: space-between;">Display SchemeActive</div> <div style="display: flex; justify-content: space-between;">ToggleInd area«</div> </div> 	<div style="display: flex; flex-direction: column; gap: 5px;"> <div style="display: flex; justify-content: space-between;">Brightness50%</div> <div style="display: flex; justify-content: space-between;">-+</div> <div style="display: flex; justify-content: space-between;">Energy save brightness</div> <div style="display: flex; justify-content: space-between;">-+</div> <div style="border: 1px solid black; height: 20px; width: 100%;"></div> </div> 

Background

3	4	5	6
<div style="display: flex; flex-direction: column; gap: 5px;"> <div style="display: flex; justify-content: space-between;">Brightness50%</div> <div style="display: flex; justify-content: space-between;">BackgroundNormal</div> <div style="display: flex; justify-content: space-between;">Display SchemeActive</div> <div style="display: flex; justify-content: space-between;">ToggleInd area«</div> </div> 	<div style="display: flex; flex-direction: column; gap: 5px;"> <div style="display: flex; justify-content: space-between;">Background colorInvert</div> <div style="display: flex; justify-content: space-between;">NormalInvert</div> <div style="border: 1px solid black; height: 20px; width: 100%;"></div> </div> 	<div style="display: flex; flex-direction: column; gap: 5px;"> <div style="display: flex; justify-content: space-between;">Background colorInvert</div> <div style="display: flex; justify-content: space-between;">NormalInvert</div> <div style="border: 1px solid black; height: 20px; width: 100%;"></div> </div> 	<div style="display: flex; flex-direction: column; gap: 5px; background-color: black; color: white; padding: 5px;"> <div style="display: flex; justify-content: space-between;">Brightness50%</div> <div style="display: flex; justify-content: space-between;">BackgroundInvert</div> <div style="display: flex; justify-content: space-between;">Sleep SchemeActive</div> <div style="display: flex; justify-content: space-between;">ToggleInd area«</div> </div> 









Screensaver, Time setting

Interval





3	4	5 3,4,5...10 s	6 50 s
<div style="display: flex; flex-direction: column; gap: 5px;"> <div style="display: flex; justify-content: space-between;">Brightness50%</div> <div style="display: flex; justify-content: space-between;">BackgroundNormal</div> <div style="display: flex; justify-content: space-between;">Display SchemeActive</div> <div style="display: flex; justify-content: space-between;">ToggleInd area«</div> </div> 	<div style="display: flex; flex-direction: column; gap: 5px;"> <div style="display: flex; justify-content: space-between;">Display SchemeInterval</div> <div style="display: flex; justify-content: space-between;">Active</div> <div style="display: flex; justify-content: space-between;">Energy save</div> <div style="display: flex; justify-content: space-between;">Interval«</div> </div> 	<div style="display: flex; flex-direction: column; gap: 5px;"> <div style="display: flex; justify-content: space-between;">Sleep Interval10s</div> <div style="display: flex; justify-content: space-between;">-+</div> <div style="border: 1px solid black; height: 20px; width: 100%;"></div> </div> 	

Toggle (Time and CO₂ and/or Temperature and/or Humidity)

Toggle time










<p>3</p> <p>Brightness 50%</p> <p>Background Normal</p> <p>Display Scheme Interval</p> <p>Toggle Ind area</p> 	<p>4</p> <p>Toggle Time 3s - +</p> <p>CO₂ X</p> <p>Temperature X</p> <p>Humidity X «</p> 	<p>5</p> <p>Toggle Time 3s - +</p> <p>CO₂ X</p> <p>Temperature X</p> <p>Humidity X</p> 	<p>6</p> <p>Brightness 50%</p> <p>Background Normal</p> <p>Display Scheme Interval</p> <p>Toggle Ind area</p> 
<p>7</p> <p>CO₂ Screen</p> <p>Temperature Settings</p> <p>Humidity</p> 	<p>8 Check</p> <p>CO₂ 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21.0%RH</p> 	<p>9</p> <p>CO₂ 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21.0%RH</p> 	<p>10 3 s</p> <p>CO₂ 429 ppm</p>
<p>11 3 s</p> <p>Temperature 23.1 °C</p>	<p>12 3 s</p> <p>Humidity 21.0 %RH</p> 	<p>13</p>	

Toggle CO₂ and/or Temperature and/or Humidity

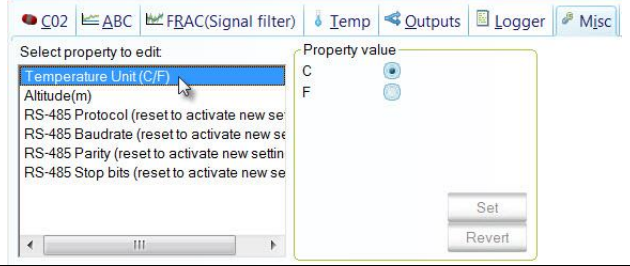
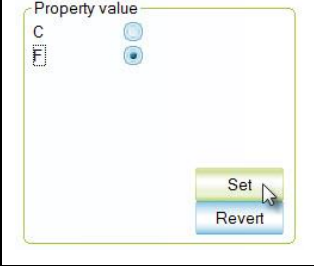
<p>3</p> <p>Brightness 50%</p> <p>Background Normal</p> <p>Display Scheme Interval</p> <p>Toggle Ind area</p> 	<p>4</p> <p>Toggle Time 3s - +</p> <p>CO₂</p> <p>Temperature</p> <p>Humidity X «</p> 	<p>5</p> <p>Toggle Time 3s - +</p> <p>CO₂</p> <p>Temperature X</p> <p>Humidity X</p> 	<p>6</p> <p>CO₂ 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21.0%RH</p> 
<p>7 Will NOT show up</p> <p>CO₂ 429 ppm</p>	<p>8 3 s</p> <p>Temperature 23.1 °C</p>	<p>9 3 s</p> <p>Humidity 21.0 %RH</p>	

Meter settings

Meter information

<p>1</p> <p>CO₂ 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21%RH</p> <p></p>	<p>2</p> <p>CO₂ Screen</p> <p>Temperature Settings </p> <p>Humidity </p> <p>«</p>	<p>3</p> <p>Enter PIN 2001</p> <table border="1"> <tr> <td></td> <td>2</td> <td>3</td> </tr> <tr> <td></td> <td>5</td> <td>6</td> </tr> <tr> <td></td> <td>8</td> <td>9</td> </tr> <tr> <td>Del</td> <td>0</td> <td>«</td> </tr> </table>		2	3		5	6		8	9	Del	0	«	<p>4</p> <p>Meter </p> <p>Measurements </p> <p>Outputs</p> <p>Misc «</p>														
	2	3																											
	5	6																											
	8	9																											
Del	0	«																											
<p>5</p> <p>Meter info RS-485</p> <p>PIN1 PIN2</p> <p>Reset</p> <p>«</p>	<p>6</p> <p>Meter information</p> <table border="1"> <tr><td>Meter status</td><td>0x0</td></tr> <tr><td>Version</td><td>1.06</td></tr> <tr><td>Serial Number</td><td>0x30DA676</td></tr> <tr><td>Type ID</td><td>404</td></tr> <tr><td>Map Version</td><td>72</td></tr> </table> <p>«</p>	Meter status	0x0	Version	1.06	Serial Number	0x30DA676	Type ID	404	Map Version	72	<p>UIP</p> <p> UIP5</p> <p>File Meter Help</p> <ul style="list-style-type: none"> ⊕ Meter Values ⊕ Value Graph (Alt+g) ⊕ Log to file ⊕ Connection ⊖ Meter information <table border="1"> <tr><td>Vendor Name</td><td>SenseAir AB</td></tr> <tr><td>Product Code</td><td>tSENSE</td></tr> <tr><td>Serial Number</td><td>0x030DA676</td></tr> <tr><td>Firmware</td><td>0x66010C</td></tr> <tr><td>Type ID</td><td>404</td></tr> <tr><td>Map Version</td><td>72</td></tr> <tr><td>Network Address</td><td>10</td></tr> <tr><td>Error Flags</td><td></td></tr> </table> 		Vendor Name	SenseAir AB	Product Code	tSENSE	Serial Number	0x030DA676	Firmware	0x66010C	Type ID	404	Map Version	72	Network Address	10	Error Flags	
Meter status	0x0																												
Version	1.06																												
Serial Number	0x30DA676																												
Type ID	404																												
Map Version	72																												
Vendor Name	SenseAir AB																												
Product Code	tSENSE																												
Serial Number	0x030DA676																												
Firmware	0x66010C																												
Type ID	404																												
Map Version	72																												
Network Address	10																												
Error Flags																													

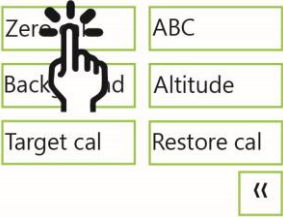

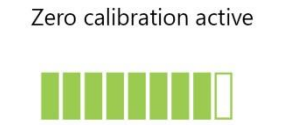

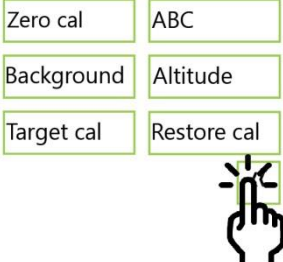
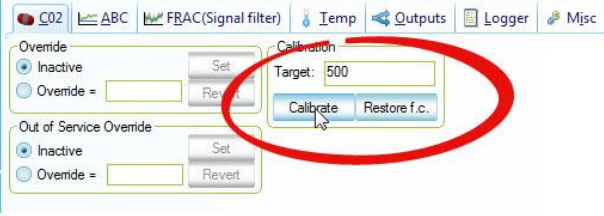
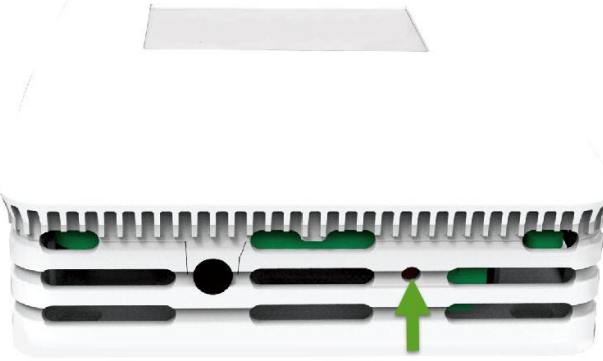

Temperature unit (°C/°F)

	5	6	7
<p>Meter</p> <p>Measurements</p> <p>Outputs</p> <p>Misc</p>	<p>CO2 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21%RH</p>	<p>Temperature offset</p> <p>Temperature unit</p>	<p>Temperature Units °F</p> <p>Celsius Fahrenheit</p>
<p>UIP5 1 Misc</p> 		<p>2</p> 	

Calibration options CO₂

4	5
<p>Meter</p> <p>Measurements</p> <p>Outputs</p> <p>Misc</p>	<p>CO2 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21%RH</p>

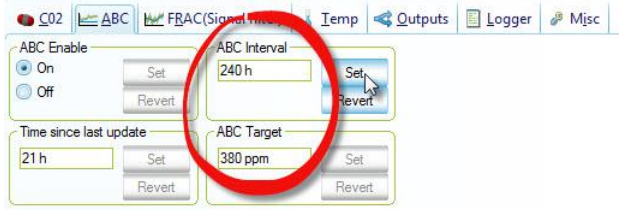
Zero cal/Background/Target cal

<p>6</p> 	<p>7</p> <p>Start zero calibration cycle?</p>  <p>Zero calibration in use 0ppm calibration target, calibration cycle takes ~5</p>	<p>8</p> <p>Zero calibration active</p> 	<p>9</p> <p>Verifying</p> 
<p>10</p> <p>Zero calibration succeeded</p>	<p>11</p> 	<p>UIP: If reference meter shows e.g. CO₂-value 500ppm set Target to 500</p> 	
<p>Background calibration button</p> <p>1 Press for 15s, until...</p>		<p>2 Green LED blinks twice</p>	
			

ABC
Enable/Disable

<p>1</p> <p>CO₂ 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21%RH</p> <p></p>	<p>2</p> <p>CO₂ Screen</p> <p>Temperature Settings </p> <p>Humidity </p> <p>«</p>	<p>3</p> <p>Enter PIN 2001</p> <table border="1"> <tr><td></td><td>2</td><td>3</td></tr> <tr><td></td><td>5</td><td>6</td></tr> <tr><td></td><td>8</td><td>9</td></tr> <tr><td>Del</td><td>0</td><td>«</td></tr> </table>		2	3		5	6		8	9	Del	0	«	<p>4</p> <p>Meter </p> <p>Measurements </p> <p>Outputs </p> <p>Misc </p> <p>«</p>
	2	3													
	5	6													
	8	9													
Del	0	«													
<p>5</p> <p>CO₂ 429ppm </p> <p>Temp 23.1°C </p> <p>Humidity 21%RH </p> <p>«</p>	<p>6</p> <p>Zero cal ABC </p> <p>Background Altitude </p> <p>Target cal Restore cal </p> <p>«</p>	<p>7</p> <p>ABC Inactive </p> <p>ABC period 180hours </p> <p>ABC target 380ppm </p> <p>«</p>	<p>8</p> <p>ABC Active</p> <p>Enable Disable </p> <p>Save new ABC state?</p> <p>No </p> <p>«</p>												
<p>9 Save</p> <p>ABC Active</p> <p>Enable Disable </p> <p>Save new ABC state?</p> <p>No </p> <p>«</p>	<p>UIP</p> <p>UIP Screenshot Details:</p> <ul style="list-style-type: none"> Buttons: C02, ABC, F1 (Signal filter), Temp, Out ABC Enable: <input checked="" type="radio"/> On, <input type="radio"/> Off ABC Interval: 180 h ABC Target: 380 ppm Time since last used: 23 h 														

ABC period (ABC target/Altitude (msl)/Restore cal)

<p>5</p> <p>CO2 429ppm Temperature 23.1°C Humidity 21%RH</p> <p>«</p>	<p>6</p> <p>Zero cal ABC Background Altitude Target cal Restore cal</p> <p>«</p>	<p>7</p> <p>ABC Inactive ABC period 180hours ABC target 380ppm</p> <p>«</p>	<p>8</p> <p>ABC period 180 hours - + Save new ABC period? Yes No</p> <p>«</p>
<p>9</p> <p>ABC period 240 hours - + Save new ABC period? Yes</p> <p>«</p>	<p>10 180, 181, 240hours</p> <p>ABC period 240 hours - + Save new ABC period? No</p> <p>«</p>	<p>11 Save</p> <p>Saving ABC period</p> <p>██████████</p>	<p>12</p> <p>Verifying</p> <p>██████████</p>
<p>13</p> <p>ABC period set to 240 hours</p>	<p>1 4</p> <p>Zero cal ABC Background Altitude Target cal Restore cal</p> <p>«</p>	<p>UIP</p> 	

Temperature/Humidity Offset

<p>5</p> <p>CO2 429ppm Temperature 23.1°C Humidity 21%RH</p> <p>«</p>	<p>6</p> <p>Temperature offset Temperature offset</p> <p>«</p>	<p>7 0.0..-0.1...-2.5°C</p> <p>Temperature offset -2.5°C</p> <p>+ -</p> <p>«</p>	<p>Temperature offset -2.5°C</p> <p>- +</p> <p>«</p>
--	--	---	--

Automatic system test

A full system test is executed automatically at every power-up. Sensor probes are checked constantly during operation against failure by checking valid dynamic measurement ranges.

System checks returns error bytes to RAM. Error codes are available by connecting the sensors to a PC with a special USB cable (art.no. 00-0-0070) connected (see fig. 2). Error codes are shown in the display at “Meter status” and in software UIP (version 5 or higher).

<p>1</p>	<p>2</p>	<p>3</p>	<p>4</p>
<p>5</p>	<p>6</p>	<p>UIP</p>	

Error codes and action plans

Error symbol (a wrench appears when one or several error codes are active)



Bit #	Error code	Error description	Suggested action
0	CO ₂ sensor Com. error	No ability to communicate with CO ₂ sensor module.	Try to restart sensor by power OFF - power ON. Contact local distributor.
1	CO ₂ sensor CO ₂ measure error	CO ₂ measurement error.	Try Background calibration ("Calibration options CO ₂ " p.16). Contact local distributor. <i>See Note 1!</i>
2	T sensor T measure error	Temp measurement error.	Try to restart sensor by power OFF - power ON. Contact local distributor.
3	RH/T sensor com error	No ability to communicate with RH/T sensor module.	
4	RH/T sensor RH measure error	RH measurement error.	
5	RH/T sensor T measure error	Temp measurement error, sensor will use CO ₂ sensor temperature if RH/T Temperature is unavailable. S_Temp will be set to NTC_Temp.	
6			
7			
8	Output config. error	Error in output configuration. Output is still updated, i.e. can be 0-10V	Check connections and loads of outputs. Check detailed settings and configuration with UIP software version 5 or higher. Contact local distributor.
9	Memory error	One or several bytes of sensors parameter memory (settings) are corrupt	Try to restart sensor by power OFF/ON Contact local distributor.

Table 2: Error codes and action plans.

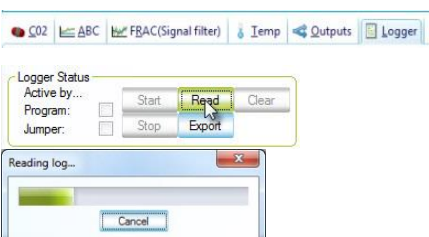
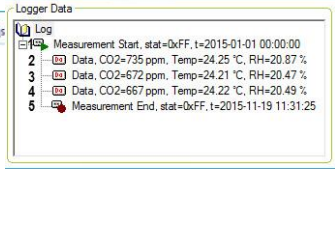
Note 1. Any probe is out of range. It occurs during over exposure of CO₂ sensor, in which case the error code will automatically reset when the measurement values return to normal. It could also indicate the need of zero point calibration. If the CO₂ readings are normal, and still the error code remains, the temperature sensor can be defect or the connections to it are broken.

If several errors are detected at the same time, different error code numbers will be added together into one single error code!

Sensor accuracy is defined at continuous operation (at least three (3) weeks after installation).

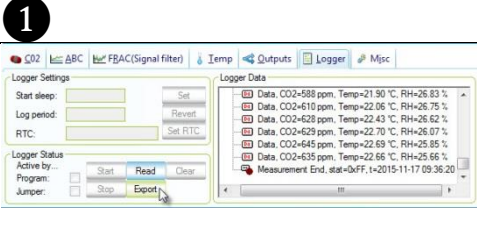
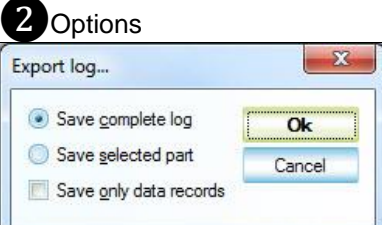
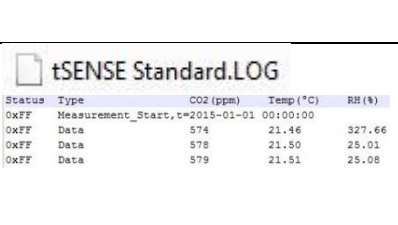
UIP Logger

Alternative 1

<p>1 Start to Read Log Data from sensor</p>	<p>2 Records for compatibility between UIP and other sensor types. NOTE! Sensor has no timer.</p>
	 <p>1 Measurement Start. Record added by UIP for compatibility between UIP and other sensor types. Status = dummy value Timestamp = dummy value 2 Oldest data record in log, average values for 15 minutes 3 Average values for 15 minutes after point 2 4 Measurement end. Record added to readout by UIP Status = dummy value Timestamp = time log was read from sensor</p>

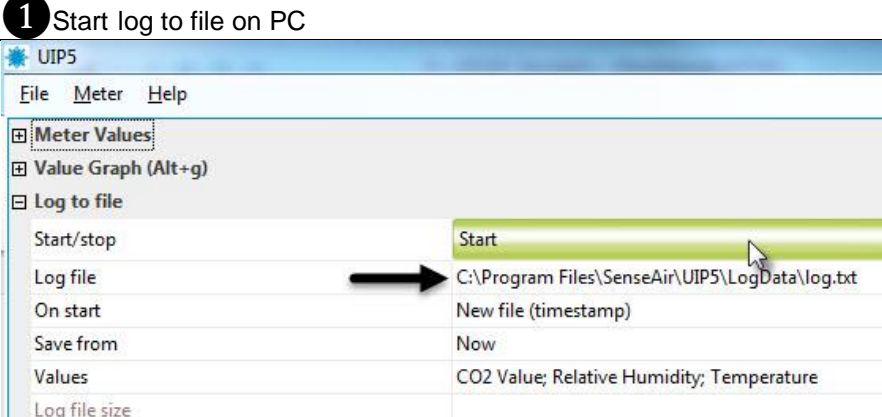


The sensor has no Real-time clock, if the sensor has not been powered on continuously, time between data points can be much longer than 15 minutes.

Export Logger Data









<p>1</p> 	<p>2 Options</p> 	 <table border="1"> <thead> <tr> <th>Status</th> <th>Type</th> <th>CO2 (ppm)</th> <th>Temp (°C)</th> <th>RH (%)</th> </tr> </thead> <tbody> <tr> <td>0xFF</td> <td>Measurement_Start, t=2015-01-01 00:00:00</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0xFF</td> <td>Data</td> <td>574</td> <td>21.46</td> <td>327.66</td> </tr> <tr> <td>0xFF</td> <td>Data</td> <td>578</td> <td>21.50</td> <td>25.01</td> </tr> <tr> <td>0xFF</td> <td>Data</td> <td>579</td> <td>21.51</td> <td>25.08</td> </tr> </tbody> </table>	Status	Type	CO2 (ppm)	Temp (°C)	RH (%)	0xFF	Measurement_Start, t=2015-01-01 00:00:00				0xFF	Data	574	21.46	327.66	0xFF	Data	578	21.50	25.01	0xFF	Data	579	21.51	25.08
Status	Type	CO2 (ppm)	Temp (°C)	RH (%)																							
0xFF	Measurement_Start, t=2015-01-01 00:00:00																										
0xFF	Data	574	21.46	327.66																							
0xFF	Data	578	21.50	25.01																							
0xFF	Data	579	21.51	25.08																							

Alternative 2








Log to file

<p>1 Start log to file on PC</p> 
<p>2</p> 
<p>3</p>  <pre> Time Offset ÅmsÅ CO2 Value ÅppmÅ Relative Humidity Å%Å Temperature ÅOCÅ 2015-11-17 13:11:58 9149974 685.00 24.36 24.36 2015-11-17 13:12:03 9154919 685.00 24.31 24.36 </pre>







PIN codes

1	2	3	4																																						
<table border="1"> <tr><td>CO₂</td><td>429ppm</td></tr> <tr><td>Temperature</td><td>23.1°C</td></tr> <tr><td>Humidity</td><td>21%RH</td></tr> <tr><td></td><td></td></tr> </table> 	CO ₂	429ppm	Temperature	23.1°C	Humidity	21%RH			<table border="1"> <tr><td>CO₂</td><td>Screen</td></tr> <tr><td>Temperature</td><td>Settings</td></tr> <tr><td>Humidity</td><td></td></tr> <tr><td></td><td>«</td></tr> </table> 	CO ₂	Screen	Temperature	Settings	Humidity			«	<table border="1"> <tr><td>Enter PIN</td><td>2001</td></tr> <tr><td></td><td>2</td><td>3</td></tr> <tr><td></td><td>5</td><td>6</td></tr> <tr><td></td><td>8</td><td>9</td></tr> <tr><td>Del</td><td>0</td><td>«</td></tr> </table>	Enter PIN	2001		2	3		5	6		8	9	Del	0	«	<table border="1"> <tr><td>Meter</td><td></td></tr> <tr><td>Measurements</td><td></td></tr> <tr><td>Outputs</td><td></td></tr> <tr><td>Misc</td><td>«</td></tr> </table>	Meter		Measurements		Outputs		Misc	«
CO ₂	429ppm																																								
Temperature	23.1°C																																								
Humidity	21%RH																																								
CO ₂	Screen																																								
Temperature	Settings																																								
Humidity																																									
	«																																								
Enter PIN	2001																																								
	2	3																																							
	5	6																																							
	8	9																																							
Del	0	«																																							
Meter																																									
Measurements																																									
Outputs																																									
Misc	«																																								








Change PIN code for access to display settings (PIN1)

5 PIN1	6 (Default 0000)	7																																																								
<table border="1"> <tr><td>Meter info</td><td>RS-485</td></tr> <tr><td>PIN1</td><td>PIN2</td></tr> <tr><td>Reset</td><td></td></tr> <tr><td></td><td>«</td></tr> </table> 	Meter info	RS-485	PIN1	PIN2	Reset			«	<table border="1"> <tr><td colspan="4">Pin code for access to display settings</td></tr> <tr><td>PIN</td><td>2</td><td>4</td><td>9</td><td>1</td></tr> <tr><td>On</td><td></td><td>+</td><td>+</td><td>+</td></tr> <tr><td></td><td>-</td><td>-</td><td>-</td><td>-</td></tr> <tr><td>PIN On/Off</td><td>Save</td><td colspan="2">«</td><td></td></tr> </table>	Pin code for access to display settings				PIN	2	4	9	1	On		+	+	+		-	-	-	-	PIN On/Off	Save	«			<table border="1"> <tr><td colspan="4">Pin code for access to display settings</td></tr> <tr><td>PIN</td><td>2</td><td>4</td><td>9</td><td>1</td></tr> <tr><td>On</td><td>+</td><td>+</td><td>+</td><td>+</td></tr> <tr><td></td><td>-</td><td>-</td><td>-</td><td>-</td></tr> <tr><td>PIN On/Off</td><td></td><td colspan="2">«</td><td></td></tr> </table>	Pin code for access to display settings				PIN	2	4	9	1	On	+	+	+	+		-	-	-	-	PIN On/Off		«		
Meter info	RS-485																																																									
PIN1	PIN2																																																									
Reset																																																										
	«																																																									
Pin code for access to display settings																																																										
PIN	2	4	9	1																																																						
On		+	+	+																																																						
	-	-	-	-																																																						
PIN On/Off	Save	«																																																								
Pin code for access to display settings																																																										
PIN	2	4	9	1																																																						
On	+	+	+	+																																																						
	-	-	-	-																																																						
PIN On/Off		«																																																								

Toggle PIN1 On/Off

6	7																																																
<table border="1"> <tr><td colspan="4">Pin code for access to display settings</td></tr> <tr><td>PIN</td><td>0</td><td>0</td><td>0</td><td>0</td></tr> <tr><td>On</td><td>+</td><td>+</td><td>+</td><td>+</td></tr> <tr><td></td><td>-</td><td>-</td><td>-</td><td>-</td></tr> <tr><td>PIN On/Off</td><td></td><td>Save</td><td colspan="2">«</td></tr> </table>	Pin code for access to display settings				PIN	0	0	0	0	On	+	+	+	+		-	-	-	-	PIN On/Off		Save	«		<table border="1"> <tr><td colspan="4">Pin code for access to display settings</td></tr> <tr><td>PIN</td><td>1</td><td>0</td><td>0</td><td>0</td></tr> <tr><td>On</td><td>+</td><td>+</td><td>+</td><td>+</td></tr> <tr><td></td><td>-</td><td>-</td><td>-</td><td>-</td></tr> <tr><td>PIN On/Off</td><td></td><td colspan="2">«</td><td></td></tr> </table>	Pin code for access to display settings				PIN	1	0	0	0	On	+	+	+	+		-	-	-	-	PIN On/Off		«		
Pin code for access to display settings																																																	
PIN	0	0	0	0																																													
On	+	+	+	+																																													
	-	-	-	-																																													
PIN On/Off		Save	«																																														
Pin code for access to display settings																																																	
PIN	1	0	0	0																																													
On	+	+	+	+																																													
	-	-	-	-																																													
PIN On/Off		«																																															

Change PIN code for access to meter settings (PIN2)

5 PIN2	6 Create PIN2 Code	7 Save																																																								
<table border="1"> <tr><td>Meter info</td><td>RS-485</td></tr> <tr><td>PIN1</td><td>PIN2</td></tr> <tr><td>Reset</td><td></td></tr> <tr><td></td><td>«</td></tr> </table> 	Meter info	RS-485	PIN1	PIN2	Reset			«	<table border="1"> <tr><td colspan="4">Pin code for access to settings</td></tr> <tr><td>PIN</td><td>1</td><td>0</td><td>0</td><td>0</td></tr> <tr><td></td><td>+</td><td>+</td><td>+</td><td></td></tr> <tr><td></td><td>-</td><td>-</td><td>-</td><td></td></tr> <tr><td></td><td>Save</td><td colspan="2">«</td><td></td></tr> </table>	Pin code for access to settings				PIN	1	0	0	0		+	+	+			-	-	-			Save	«			<table border="1"> <tr><td colspan="4">Pin code for access to display settings</td></tr> <tr><td>PIN</td><td>1</td><td>0</td><td>0</td><td>0</td></tr> <tr><td>On</td><td>+</td><td>+</td><td>+</td><td>+</td></tr> <tr><td></td><td>-</td><td>-</td><td>-</td><td>-</td></tr> <tr><td></td><td></td><td colspan="2">«</td><td></td></tr> </table>	Pin code for access to display settings				PIN	1	0	0	0	On	+	+	+	+		-	-	-	-			«		
Meter info	RS-485																																																									
PIN1	PIN2																																																									
Reset																																																										
	«																																																									
Pin code for access to settings																																																										
PIN	1	0	0	0																																																						
	+	+	+																																																							
	-	-	-																																																							
	Save	«																																																								
Pin code for access to display settings																																																										
PIN	1	0	0	0																																																						
On	+	+	+	+																																																						
	-	-	-	-																																																						
		«																																																								

Maintenance

tSENSE (Disp) is maintenance free. Internal self-adjusting calibration (ABC) function takes care of normal long term drift. To secure highest accuracy, a time interval of five years is recommended between CO₂ calibrations, unless some special situations have occurred.

Software can be downloaded free at www.senseair.com.

USB-cable and zero calibration kit can be ordered from Senseair.

Check can be done on site without interfering with ventilation system.

